



2) 3/4" is a good thickness for a stand; use plywood or particle board.

Drill large holes

3) Drill six or seven large holes into bottom of game stand; holes do not go all the way through; each hole should be large enough to hold between 5 and 6 metal washers; may also fill holes with pewter/lead or pennies.

Cardboard.

4) Glue a cardboard base over holes to hold in washers.





## **ANTENNA**

Replacement, 9 Segmented, Telescoping Antenna (24" length).

This is available in both the USA and Canada from RadioShack®.
This item would appear to be more common in Canada than the USA.

ITEM#270-1413A